




# Remove Before Flight FABRIC

eduard


32 807

1/32 scale detail set for kit • sada detailů pro model 1/32

**PE -  
PHOTOETCHED  
PART**

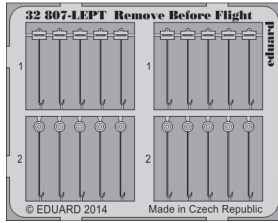

**TP -  
TEXTILE  
PART**

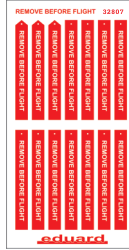

- APPLY EXPRESS MASK AND PAINT BEFORE GLUING  
POUŽIT EXPRESS MASK NABARVIT PŘED SLEPENÍM
- SYMETRICAL ASSEMBLY  
SYMETRICKÁ MONTÁŽ
- REMOVE  
ODSTRANIT
- GRIND  
OBROUSIT
- DRILL HOLE  
VRTAT OTVOR
- COLORED ETCHED PARTS  
LEPTANÉ BAREVNÉ DÍLY
- BEND  
OHNOUT
- OPTION  
VOLBA
- REPLACE  
NAHRADIT




ORIGINAL KIT PARTS  
PŮVODNÍ DÍLY STAVEBNICE

PHOTO-ETCHED PARTS  
LEPTANÉ DÍLY

PARTS TO BE REMOVED  
DÍLY K ODSTRANĚNÍ

FILL  
TMELIT

**TEXTILE  
PARTS**

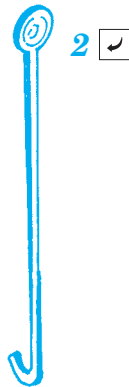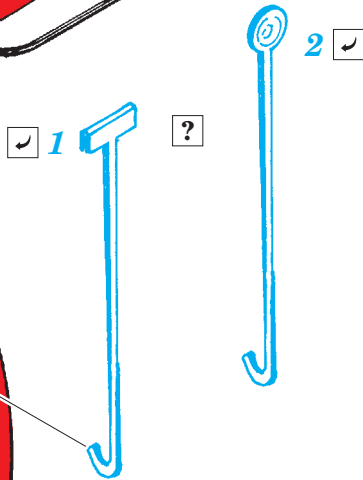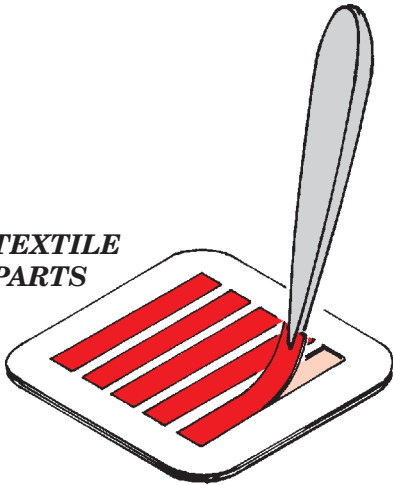

**FOR POSITION AND SHAPE SEE YOUR REFERENCES OF EXACT AIRPLANE**

- 1. Take the precut textile part out of the sheet.**
- 2. Remove supporting paper.**
- 3. Crumple the belt into a little ball and nead it between the fingers.**
- 4. Thread the belts through the buckles - use superglue.**
- 5. Put the belts into the seat.**
- 6. Spray by the glossy varnish.**
- 7. Impregnate the belts with very diluted oil color (mix black and brown) - it will highlight the texture.**
- 8. Spray by matt varnish.**

**After the varnish becomes dry it is possible to drybrush with light oil colour.**